

PTAC MAINTENANCE


You can extend the life of your PTAC units by performing regular maintenance like replacing air filters, cleaning coils, and inserting drain tablets.



1 Turn off the PTAC and unplug it.



2 Vacuum and clean the PTAC, including filters and cover.

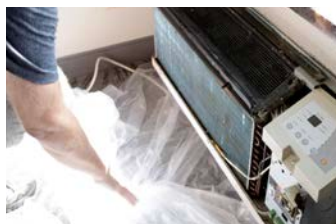


3 Put down tarps under and around the PTAC.



4 Spray foam cleaner onto coil.



5 Let foam sit to pull out dirt.

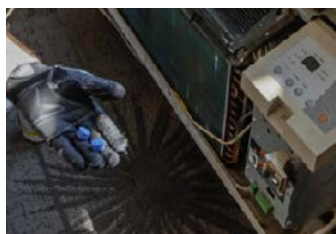

6 Insert pan tablets into condensate drain pan.



PRO TIP

Vacuum or rinse filters at least once a month to improve the efficiency of the unit.

Quarterly PTAC maintenance will help reduce odors and energy costs, and will extend the life of the PTAC unit.

SUPPLIES TO DO THE JOB



RIDGID® Stinger™ Wet/Dry Vacuum
181763



Maintenance Warehouse® High-Dexterity Gloves
282529



Frost King® Blue Vinyl Heavy-Gauge Tarp
129665



Supco Stainless Steel Refrigeration Fin Comb
150250



Nu-Calgon Coil Cleaner Evap-Fresh
907307 ⚠️ See Footnote



Hydro-Balance® Zip™ Clean Evaporator Coil Cleaner
150606



Chapin® Multi-Purpose Hand Sprayer
130302 ⚠️ See Footnote



Hydro-Balance® Ever-Clean Condensate Pan Tablets
907253

⚠️ WARNING: California Residents, this product contains chemical(s), which is/are known to the State of California to cause cancer and/or birth defects or other reproductive harm. Find more information by visiting hdsupplysolutions.com to review the specific product details.

© 2008 - 2022. HDS IP Holding, LLC. All Rights Reserved. HD Supply® and the HD Supply logo are trademarks of HDS IP Holding, LLC. For our terms and conditions, visit hdsupplysolutions.com/terms.

22-22431

3 EASY WAYS TO ORDER



MOBILE APP



1.800.431.3000



hdsupplysolutions.com