


REPLACING SHOWER FIXTURES

Guests expect a well-maintained shower area, and a simple way to improve your shower experience is to replace old or leaking fixtures.



1 Apply Teflon tape before installing the showerhead.

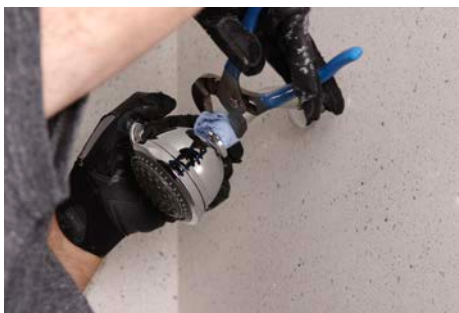

2 Install new shower arm, using a towel or glove for a better grip.



3 Remove the drain stopper, overflow plate, and tub spout.



4 Install new Watco® Tub Drain Closure grid strainer, which reduces hair clogs.



5 Install the new Watco® overflow plate.



6 Use a wrench to thread the new tub spout into place.

SUPPLIES TO DO THE JOB



Maintenance Warehouse®
High-Dexterity Gloves
282529



Black Swan® PTFE Tape
401605



Watco® NuFit® Push Pull®
Tub Drain Closure
642697 ⚠ See Footnote



Seasons® Showerhead
307131



Shower Arm - Chrome
529435



Seasons® Chrome
Diverter Tub Spout
425170 ⚠ See Footnote

⚠ WARNING: California Residents, this product contains chemical(s), which is/are known to the State of California to cause cancer and/or birth defects or other reproductive harm. Find more information by visiting hdsupplysolutions.com to review the specific product details.

© 2008 - 2022. HDS IP Holding, LLC. All Rights Reserved. HD Supply® and the HD Supply logo are trademarks of HDS IP Holding, LLC. For our terms and conditions, visit hdsupplysolutions.com/terms.

22-22431

3 EASY WAYS TO ORDER



MOBILE APP



1.800.431.3000



hdsupplysolutions.com